


A40040A – Thermostatic Operator Instructions

Pensotti panel radiators have integral thermostatic and flow setter valves as standard equipment, thermostatic operators are optional.

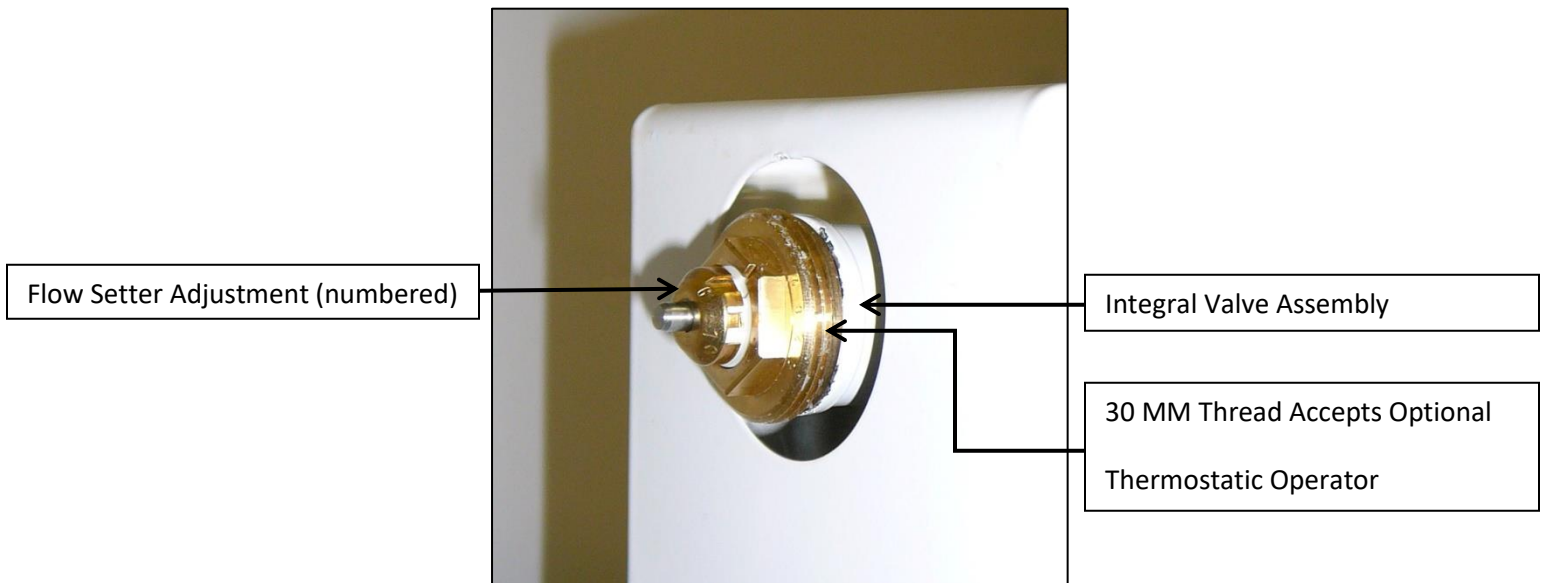

Number	Percentage Open
1	10
2	20
3	30
4	40
5	50
6	100

Note: As the flow setter valve opening is reduced the pressure drop (resistance) through the radiator will increase. Considering the additional pressure, circulator performance may need to be re-assessed.

A40040A Thermostatic Operator Settings

Number	Approximate Room Temperature
Snowflake	44 F
1	52 F
2	61 F
3	68 F
4	75 F
5	82 F

Note: The A40040A Thermostatic Operator does NOT take the place of your centralized thermostat(s). This device will only control the radiator on which it is installed on and is NOT able to activate your heating system.

Please refer to the complete installation manual for information regarding system piping and proper use of the A40040A Thermostatic Operator.

Valves, Fittings and Accessories for Pensotti Steel Panel Radiators carry a 1-year warranty.

To install the A40040A Thermostatic Operator onto a Pensotti Steel Panel Radiator:


Step 1: Remove the White Protective / Manual Adjustment cap from the Radiator Thermostatic Insert.

Step 2: Remove the A40040A Thermostatic Insert from its packaging.


Step 3: Turn the A40040A Thermostatic Operator to the "5" position.

Step 4: Secure the A40040A Thermostatic Operator onto Thermostatic Insert by turn threading on the chrome portion onto the insert. Be sure to align the hexagonal shape of the Thermostatic Insert & Thermostatic operator (see below images).

Step 5: Set the to the desired room temperature using the chart above.

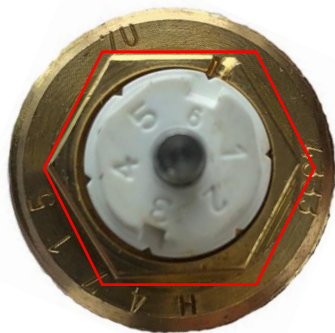

Thermostatic
Insert

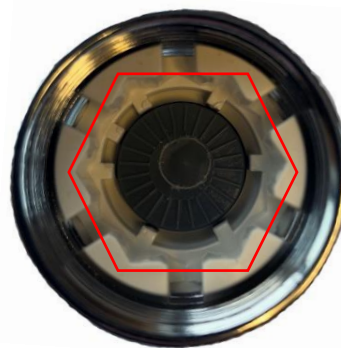

A40040A Thermostatic
Operator

